



Sony Handycam CCD-TR5 Microphone Replacement

This guide will take you through the process of replacing a faulty or non-functioning microphone in your Sony Handycam.

Written By: Emma



INTRODUCTION

This guide will take you through the process of replacing a faulty or non-functioning microphone in your Sony Handycam.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Microphone




- Using a Phillips #00 screwdriver, remove (1) screw from bottom, (1) screw from side, (1) from top of camera

Step 2



- Remove tops screws from microphone

Step 3

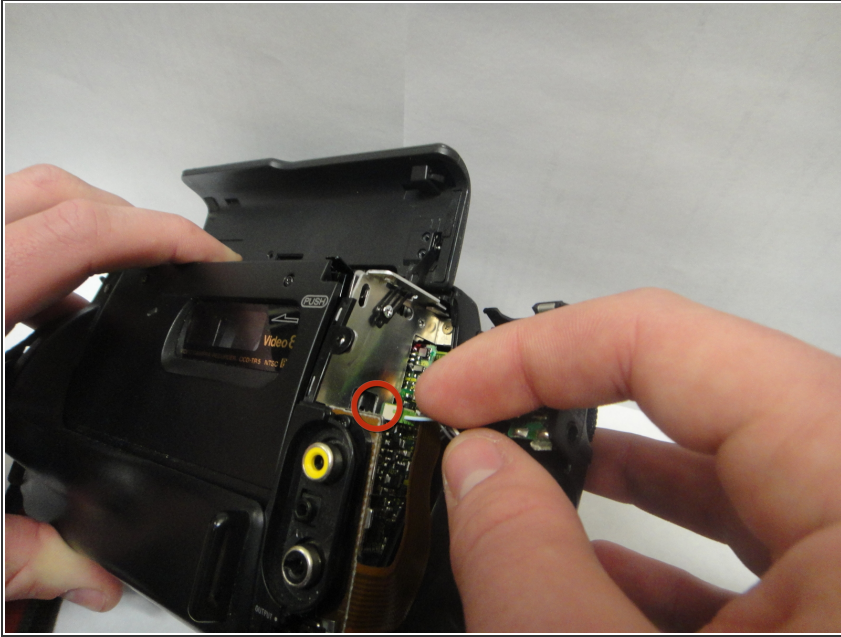

- Remove electrical connector from circuit board

Step 4



- After screws are removed, microphone will detach from camera. Your microphone is now disassembled from camcorder.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-28 09:34:58 AM.